


Installation for the 2 bolts near the JL back seat



1. Unscrew the 2 screws on the rollbar and remove the soft top pillar

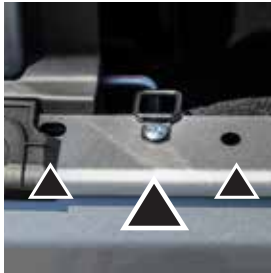

2. put the Tie-down D-ring on the tub edge, and screw the M8 flat head screw to the screw hole in between the 2 holes next to the back seat



3. Put the soft top adapter back on top of the D-ring with care



4. Screw the 2 bolts back on to the rollbar. Repeat the same on the other side of the Jeep



5. Install the screws or the Anchor Bolts (upgrade only) with the Tie-down D-rings on the rest of the 4 mounting holes on the JL tub edge